- 6. Function 1: When you have the Carousel Open or Menu open, pressing the F1 button will close the Carousel or Menu. When you are on the home screen and your device has an attached LRF, pressing F1 will activate the LRF.
- 7. Function 2: When using your Obsidian 5 device and you are in the environmental settings menu, pressing F2 will allow you to go to the next screen to update the environmental settings. With an Obsidian 5 thermal pressing the F2 will activate NUC.

6. BATTERY REPLACEMENT

- Unscrew the battery cover using a screwdriver to remove the back cover.
- 2. Remove the CR2032 battery
- 3. Replace with new CR2032 battery
- Replace the battery cover and use a screwdriver to secure the cover back on the remote.

Important Export Restrictions! Commodities, products, technologies and services contained in this manual are subject to one or more of the export control laws and regulations of the US BIS-Department of Commerce, Export Administration Regulations. It is unlawful and strictly prohibited to export, or attempt to export or otherwise transfer or sell any hardware or technical data or furnish any service to any foreign person, whether abroad or in the United States, for which a license or written approval of the U.S. Government is required, without first obtaining the required license or written approval from the Department of the U.S. Government having jurisdiction. Diversion contrary to U.S. law is prohibited.





For customer service and technical support, please contact

NETWORK CORP.

American Technologies Network Corp.

2400 NW 95 Ave, Doral, FL 33172. Phone: **800-910-2862**, **650-989-5100**. E-mail: **service@atncorp.com**. Site: **www.atncorp.com**

The information in this manual furnished for informational use only, is subject to change without notice, is not to be construed as a commitment by ATN Corp.


ATN Corp. assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

©2022 ATN Corp. All rights reserved.

MANUAL



X-TRAC 5 REV. 1 – AUGUST, 2022

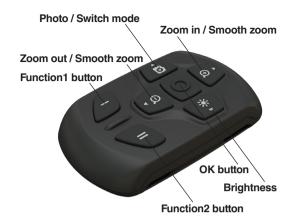

1. SPECIFICATIONS

ACMURCNTRL5
4.2
Water resistant
1 × CR2032
1 month
7 tactile buttons
1.7×3×0.7" 44×76×18 mm
1.1 oz / 33 g
2 years

 $^{^{\}star}$ ATN reserves the right to change the above specifications at any time without notice.

2. DESCRIPTION

The X-TRAC 5 was designed to aid the shooter in a dynamic shooting environment. Have all your controls at your fingertips and never get bogged down in a mission critical situation.



Seven Tactile buttons give you precise control over all your features. Using your Zoom, Video Record, Ballistic Calculator, System Settings, etc on your Obsidian 5 Scopes just got easier.

3. INCLUDED

- Remote control
- Battery
- Velcro straps × 2
- Manual

4. CONNECTING THE X-TRAC 5

- Activate the Bluetooth function in your Obsidian 5 device.
- 2. Enter the system setting from the menu.
- 3. Select the Wireless Category.

- 4. Select Remote Controller.
- Select Pair. You should see a half circle move around in the upper right side of the screen around the Bluetooth Icon.
- Press and hold for 2 seconds the Up Button and the Down Button to Pair the X-TRAC 5 to your ATN compatible device.

5. X-TRAC 5 BUTTON LAYOUT

- Up button: On the home screen adjusts zoom in level. Pressing and holding the Up Button will engage smooth zoom in. Short Press of the Up Button will engage Step Zoom in. Up Button is also used to navigate in the carousel and system menu.
- 2. Down button: On the home screen adjusts zoom out level. Pressing and holding the Down Button will engage smooth zoom out. Short Press of the Down Button will engage Step Zoom out. Down Button is also used to navigate in the carousel and system menu.
- 3. Left button: On the home screen a Short Press of the Left Button will activate photo capture. A Long Press of the Left Button will switch the mode to Video. Left Button is also used to navigate in the carousel and system menu.
- 4. Right button: On the home screen changes the device display brightness. Right Button is also used to navigate in the carousel and system menu.
- **5. OK button**: Using the OK Button opens the Carousel from the home screen and confirms selections in the menu.